
701 Osage Street, Unit 120, Denver, CO 80204 USA Phone 303.892.0400 Toll Free 800.333.4234 Fax 303.825.5988 EMail info@bisonip.com Web www.bisonip.com

"T" METHOD: DETERMINE CAVITY HEIGHT AT ALL THRESHOLDS, DRAINS AND HIGH POINTS. DEDUCT THE THICKNESS OF THE DECKING MATERIAL FROM THE MEASURED DISTANCE BETWEEN THE TOP OF THE MEMBRANE AND THE TOP OF THE DECKING MATERIAL TO DETERMINE THE PEDESTAL HEIGHT AND MODELS NEEDED FOR EACH LOCATION. USE A "LASER LEVEL" TO MARK THE TOP OF PEDESTAL ELEVATION AROUND THE DECK. PLAN PAVER/PEDESTAL LAYOUT PATTERN BEFORE STARTING, BY MARKING GUIDELINES ON THE ROOF IF NEEDED. USING THE GUIDELINES INSTALL A "T"

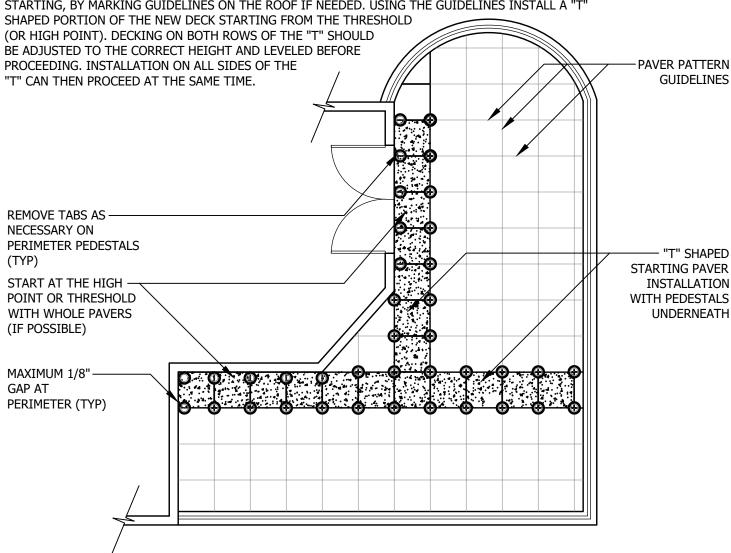

GENERAL NOTES: APPLY TO ALL OF THE ABOVE PRODUCTS

- 1. INSTALLATION MUST BE COMPLETED IN ACCORDANCE WITH BISON INNOVATIVE PRODUCTS SPECIFICATIONS.
- 2. DRAWINGS NOT TO SCALE.
- 3. CONTRACTOR'S NOTE: FOR PRODUCT AND COMPANY INFORMATION VISIT www.BisonIP.com



## STARTING INSTALLATION

USING "T" INSTALLATION METHOD